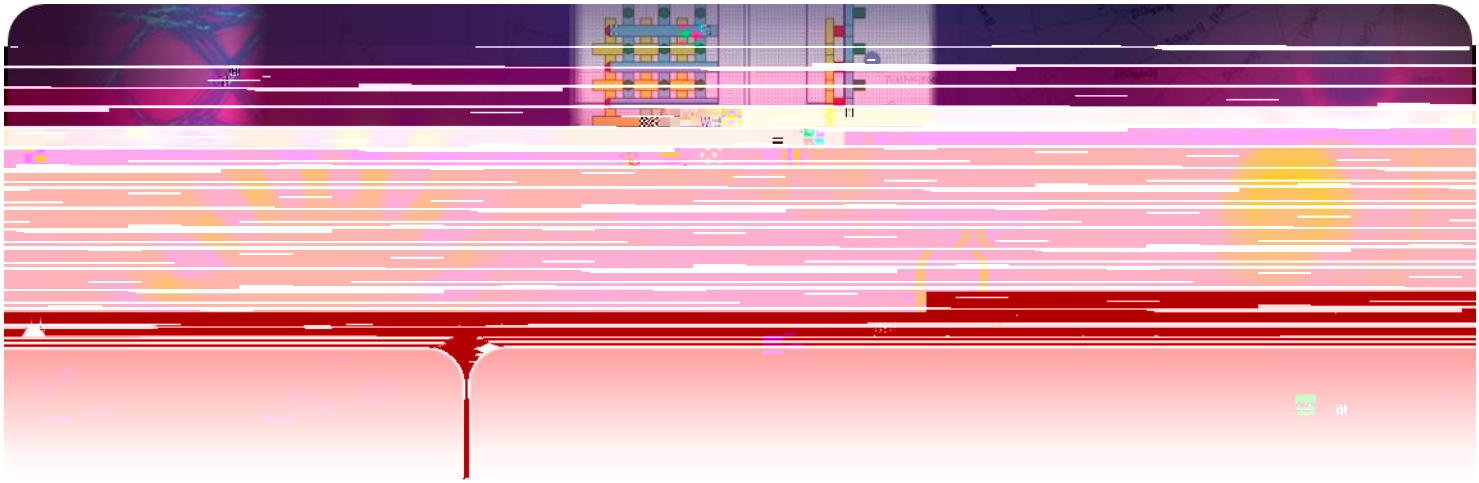

1

# Windows Installation

This chapter describes the Windows

## 1.A. Getting Started

**Installer:** There is one installer for the following three toolsets:

**RSoft Photonic Device Tools**, contains FullWAVE FDTD, BeamPROP BPM, DiffractMOD RCWA, FemSIM FEM, BandSOLVE, GratingMOD, the RSoft CAD, LaserMOD, and various utilities and options

**Synopsys OptSim**

**Synopsys OptoDesigner**

You will only be able to use tools that you are licensed for. The required licensing program (Synopsys Common Licensing, or SCL) is included with the installer.

**License Key File:** This file corresponds to your license and is not needed when installing a network license on a client machine.

**USB Dongle:** Purchased licenses require a USB dongle that corresponds to your license. For network installations the dongle should be attached to the server machine.

## How to Get the Installation Items:

**Evaluators** will receive instructions via email.

**Customers who have purchased directly from Synopsys** should create a SolvNetPlus account to download installation files as well as License Key Files at http://solvnetplus.synopsys.com/. Contact us at photonics_support@synopsys.com if you need assistance. The Photonic Solutions tools appear

You can leave this blank if updating and a new license key file is not needed (if the installed and new versions have the same first two numbers, i.e., 2022.09 and 2022.09-1). You can install a new license key file after installation via the Configure Licensing Utility described in Section 1.D.

#### Select SCL Installer

Use the version that is automatically selected: It will be created by the installer and run automatically.

## Running

## Dongle Issue Symptoms

If your license requires a dongle and the correct USB dongle is not recognized, you will get a -97 SCL error message and the flexlog (`licenses\flexlog.txt` `SERVER line says XXXXX, hostid is…` `XXXXX` is your actual Host ID).

`rslmd –rsoftid` `lmhostid –flexid`

dongle which should match what is physically written on the side of the dongle. Note that the `lmhostid` command must be run from its location (`c:\synopsys\scl\VVV\win32\bin\` by default, where `VVV` is

## 1.G.8. Installing and Configuring SCL

SCL is not required when installing network license on a client machine. For additional help with SCL contact us as described in Section 1.F.

SCL

Photonic Solutions software is installed to `<synopsys-root>/photonicsolutions`, referred to as `<ps-root>` in these instructions. Software is installed in versioned sub-directories. The version is referred to as `<ps-version>` and so the path of an individual version will be `<ps-root>/<ps-version>`.

## Step 1: Running the Installers

There are two methods to install Photonics Solutions software on Linux:

Use this method if you are familiar with installing Synopsys spf files with the Synopsys Installer and either have an existing SCL license server or are familiar with setting up a SCL server manually.

You should install the required `photonicsolutions` spf files using the Synopsys Installer. The installation directory corresponds to `<synopsys-root>` described above. Additional steps are required to install OptoCompiler, see the OptoCompiler manual for more details.

If

## Step 3: Configuring Userôs Environment

All users must set these environment variables to use the software, this can be done via a module

```
export PHOTONICS_SOLUTIONS_ROOT=<ps-root>
```

# 2.C. Support, Upgrades, and Resources

RSoft software normally comes with one year of maintenance that includes technical support, product updates, and resources.

*Technical Support & Product Updates.*

Technical support is handled by Synopsys (photonics_support@synopsys.com), except in

# 2.F. Additional Linux Installation Information

If after performing the installation an error message appears when the program is opened, review the instructions above and the notes in this section. If a solution cannot be found, contact us.

## 2.F.1. Manually Configuring SCL

These instructions are for manually configuring SCL, only use them if you do not have an existing SCL installation:

1. **Copy Library (if using a FLEX USB dongle only)**

## 2.F.2. Required Packages, Distribution-Specific Requirements, & Missing Libraries

Most required dependencies are typically included on Linux systems by default. However, depending on your exact configuration, some additional steps might be required.

### Missing Libraries and Required Packages:

This is a list of general requirements, see next section for distribution-specific requirements.

```
ldd <binary>
```

library is available check the `etc` subdirectory in the RSoft installation directory. These libraries can be installed by moving to the `/bin` `tar zxf ../etc/libXXX.taz` `XXX` corresponds to the library name.

SCL (Synopsys Common Licensing) requires several packages:

The LSB (Linux Standards Base) package is required. If you get error mess *No such file or directory* *bad ELF interpreter* `lmgrd`, check to see if the LSB package is installed; on RedHat/CentOS, try the `redhat-lsb` package and on Ubuntu try the `lsb` package.

The `csh` package is required.

If installing -bit compatibility package.

Some Linux distributions use `systemd` instead of `rc.local`. As an example, `rc.local` can be enabled for Ubuntu 16.04 by running the command:

```
systemctl enable rc-local.service
```

and then removing the line `exit 0` in the file `etc/rc.local`. The `setup_rsoft` script in the main installation instructions can then be run to add the required commands to the `rc.local` file.

**Installing the USB Dongle on RedHat/CentOS 7.x or Ubuntu Systems:**

Installing the USB dongle driver on RedHat/CentOS 7.x or Ubuntu systems requires additional steps:

The 32-bit compatibility package is required (`glibc.i686` for RedHat/CentOS or `libc6-dev-i386` for Ubuntu).

Remove the dongle if attached.

```
aksusbd              ps –ef | grep aksusbd
```

run the `ps` command again to check that they are gone.

Copy the file `rsoft/hardlock/80-hasp.rules` to `/etc/udev/rules.d`. Note that you will have to modify the path to the - file several times.

If using a FLEX dongle, you will need to

### Using Custom SCL Ports

While it is recommended to use the default SCL ports (27020, 27021), you can use other ports by editing the license file to use the new ports on the `SERVER` and or `VENDOR` lines. You will have to restart SCL to make any changes take effect. You will have to restart SCL to make any changes take effect. You can also use the `rsfixlic` utility with `-vport` option to force the vendor port to +1 more than the SCL port. See Section 2.F.6 for more details. You will have to restart SCL to make any changes take effect.

## 2.F.6. Installing the License Key File

License key files have start and end dates and will not work outside this range. License key files are not required for network client installations. See Section 2.A for details about obtaining license key files.

Installing a license key file involves editing the file and copying it to the correct location. This process is documented in the SCL documentation, or can be automatically done by the `rsfixlic` utility described in Section 2.F.1. Note you will have to restart SCL for changes to take effect.

You can also manually edit the license file by making the following changes:

`hostname1` `SERVER` line to the name of the License Server

Set the port on the `SERVER` line, it is `27020` by default

`path/to/snpslmd` `VENDOR` `snpslmd`

Optional: Set the vendor port by adding `port=27021` (or any other port) to the end of the `VENDOR` line

Save the edited file and (re)start the SCL server

## 2.F.7. USB Dongle Drivers and HOST ID

If your license requires a dongle and the correct USB dongle is not recognized, you will get a -97 SCL error message and the flexlog (`<ps-root>/<ps-version>/rsoft/licenses/flexlog.txt`) contains a `SERVER line says XXXXX, hostid is…` `XXXXX` is your actual Host ID).

`rslmd –rsoftid`

`lmhostid –flexid`

dongle which should match what is physically written on the side of the dongle.

### What to Check

Make sure that the dongle is attached and that the red light inside the dongle is continuously lit. If it is not lit, try installing the dongle driver as described below or try another USB port. If the dongle is blinking, contact us as described in Section 2.E.

If using the software on a virtual machine, make sure that the emulation software is set so that the virtual machine sees the dongle attached to the parent machine.

*aksusb: not found* *bad ELF interpreter* , make sure you have your Linux -bit compatibility package installed. See Section 2.F. for distribution specific instructions.

```
Can't get hostid of type 15 []
```

(`rsoft\licenses\flexlog.txt`), make sure the `libhasp_linux_x86_64.so` library is copied as described in the installation steps.

Make sure the dongle driver is installed as described in the installation steps.

http://www.safenet-inc.com/sentineldownloads/.

### 2.F.8. Manually Stopping & Starting SCL

If the license key file has been installed and the SCL server has been started, most SCL errors occur when the SCL server is not running. While ensuring that the USB dongle is attached and restarting the computer will fix most problems, this is not the preferred solution. The `rslmgrd` utility can be used to easily interact with the SCL Server. To stop and start the SCL server, use these commands:

```
rslmgrd –restart
```

Note that the server can take several seconds to completely start. Other commands can be used to interact with the SCL server to install or remove the server. To see a complete list of options, use the command `rslmgrd –?`.

You can check if the SCL server has correctly started by looking at the `<ps-root><ps-version>/rsoft/licenses/flexlog.txt` log file. Additional information can be found in the `rslmdlog.txt` file in the same directory.

Alternatively, you can start the SCL server with a command like:

```
<scl_path>/linux64/bin/lmgrd
   –c /<ps-root>/<ps-version>/rsoft/licenses/rsoft.lic
   -f /<ps-root>/<ps-version>/rsoft/licenses/flexlog.txt
```

where `<scl_path>` is the SCL installation path. You may have to modify this command based on the license file location.

## 2.G. SCL Errors

SCL error codes indicate the type of error that has occurred. Additional information is shown in the SCL error dialog and, in some cases, more detailed information can be found in the `flexlog.txt` file (in `rsoft/licenses` by default).

- -

# 3

# Cluster Installation

This chapter describes the configuration of a cluster for both Windows and Linux systems.

## 3.A. Pre-Install Checklist

Please read this section before starting to use clustering features.

*Licensing*

Clustering allows simulations to use multiple cores, CPUs, or machines utilizing the message passing interface (MPI). Clustering is included with every license of FullWAVE and each machine to be used in the cluster must be licensed for FullWAVE.

*Basic Software Installation*

Before configuring a cluster installation, the software should be installed on all nodes (computers) as described in the previous chapters.

*Cluster Installation and Testing*

It is recommended that all cluster users first configure and test a standalone cluster. Users who are licensed for network clustering can then proceed to configuring and testing a networked cluster.

## 3.B. Configuring and Testing a FullWAVE Cluster

See Chapter 6 in the MOST manual for instructions on configuring and testing a MOST cluster.

```
ssh cluster_node_name
```

first time you try each node, you will get a question about the authenticity of the host - type `yes` to continue. After that, you will not be asked again.

This should be repeated for each cluster node.

*Creating a shared workspace*

The working directory where simulation files are stored must be a shared folder on the network that all cluster nodes can access and have full read/write permission. Furthermore, it must be accessible via the same path by all nodes in the cluster. This is most easily done by accessing all design files and running all simulations with UNC paths. For example, if design files are located in the directory `\tmp` on a computer named `master_node`, and this directory is shared on the network as `cluster_sims`, open the file from the location `\\master_node\cluster_sims`.

*Environment Variables*

In order for remote shells created by `ssh` to function correctly, they require any variables defined locally to be set in the new shell. Since `ssh` only uses standard shell initialization files, make sure that any modules or environment variables used by the software are defined in the standard login file.

*X11 forwarding*

For FullWAVE simulation windows to appear on the master node, you must enable X11 forwarding in the `ssh` configuration file. This can be done by creating (or editing) the `~/.ssh/config` file and

```
ForwardX11=yes
```

-graphic mode if desired.

## Testing a Networked FullWAVE Cluster

First test each node separately and then test as a group.

### Testing Nodes Separately

Open a command prompt on a node, move to the `\examples\FullWAVE` directory, and issue the following command:

```
fwmpirun –np1 –hosts localhost –show1 wg.ind
```

This command indicates that a clustered simulation of the file `wg.ind` should be performed on the local

simulation of a simple waveguide.

Next, issue this command to use two processes (CPUs) on the local machine:

```
fwmpirun –np2 –hosts localhost –show1 wg.ind
```

A FullWAVE simulation window should open that shows half of the simulation domain seen before. If this appears MPICH is working correctly. This should be repeated on all nodes to ensure they function correctly.

### Testing Nodes Together

Once the nodes have been verified to work on their own, the networked aspect of the clustering can be tested. Open a command prompt on the master node and move to the shared directory created in the previous section. Copy the file `\examples\FullWAVE\wg.ind` to this directory and issue the command

```
fwmpirun –i. 6m2 T1T0.00000912 0 612 792 reW* nBT/F12 9.96 Tf1 0 0 1 144.72 571.78 Tm0
```

| | |
|---|---|
| | other software on the computer. Only uninstall if you know that this will not affect other users/tools, contact your IT department with questions. |
| `rslmd -remove` | Removes the `rslmd` service, should only be done if uninstalling on the RSoft License Server and using the `RSLM_SERVER` variable on clients. This process runs on clients but will auto-stop in this mode. |
| `haspdinst -fremove` | |
| | dongles |

Remove any environment variables starting with `PHOTONIC_SOLUTIONS_`, `RSOFT_`, `OPTSIM_`, or `RSLM`. Examples are `PHOTONIC_SOLUTIONS_ROOT`, `RSOFT_PROGRAMPATH` or `RSLM_SERVER`

If no other Synopsys tools are used in this environment, uninstall Synopsys Common Licensing (SCL) and unset the `SNPSLMD_LICENSE_FILE` variable

Delete