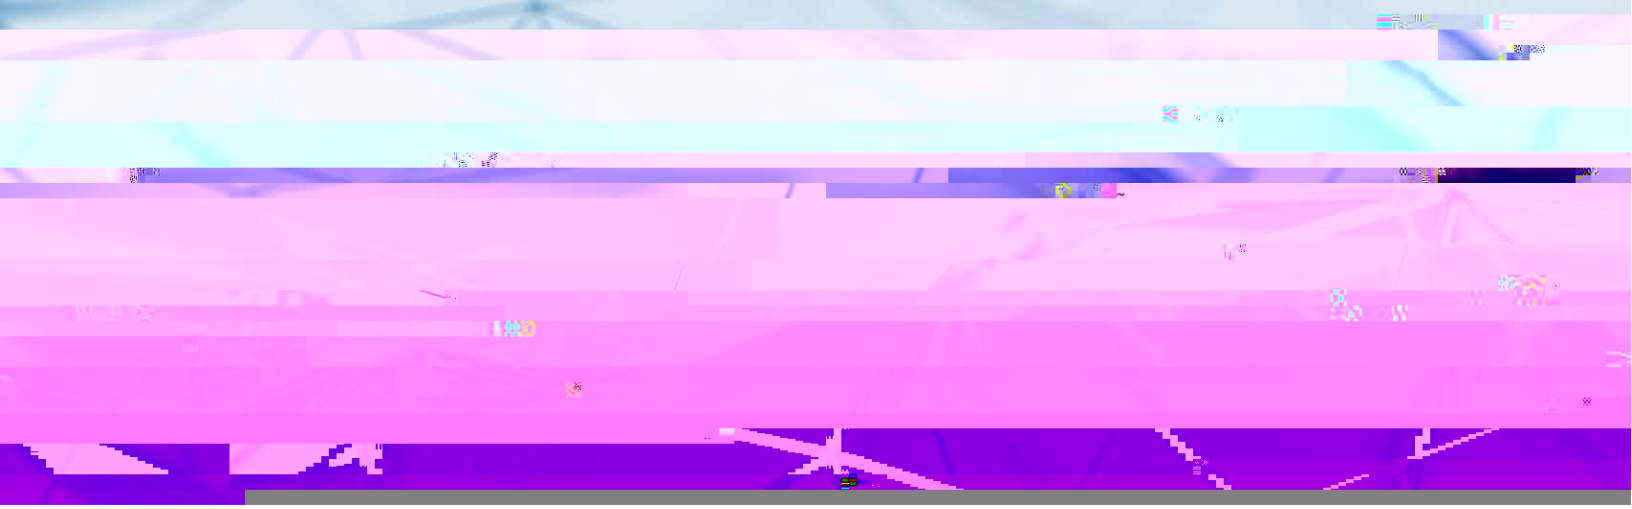

Import Formats

DICOM (version 3.0 and 2D stacks) including:

– 4D (time-resolved) DICOM with time step selection

– Option to store DICOM tags with imported data

DICOM encapsulated STL surface models

ACR-NEMA (versions 1 and 2)

DICONDE

Export formats:

- AVI
- Ogg Theora
- H.264/MPEG-4 AVC
- Windows Media Video (WMV)
- PNG sequence

Variety of export sizes: From 480p to 2160p (4K)

4D Frame Toolbox

Active frame slider to manually control frame displayed in the 2D slice views and 3D view

Cine mode for active slice view and 3D view

Compare frames: compare two 2D slice views to examine differences

Options to set the time between frames and delete unwanted frames

Working with Surface Data

Surface to mask tool – conversion of surface objects to image masks by voxelization. Three available methods:

- Accurate for manifold objects: when converting watertight surface object
- Accurate for non-manifold objects: when converting non-watertight surface object
- Robust: Less accurate but failsafe option for poor quality surface objects

Mask to surface tool: use the current 3D visualization of a mask to create a surface object

Create shape – generate surface object primitives:

- Cuboid
- Cylinder
- Sphere
- Cone
- Tube

Sweep centerlines: create surface objects from centerlines or centerline networks

Manipulate surface objects both interactively and by absolute position and orientation:

- Transform
- Rotate
- Scale: aspect ratio preserving or along specified axis
- Zero position: move surface object to the image space origin

Use global, local or user-defined axis for object manipulation

2D nudge tool to fine tune position of surface object in 2D views

Snap registration tool: automatic registration of two surfaces with no additional inputs

Register datasets tool – register surface objects to any other dataset types:

- Register to datasets in the current project or a foreign project (a separate Simpleware project file)
- Best fit algorithm to align surface objects together with 3 methods: landmark, automatic, landmark and automatic
- Landmark: uses picked landmark points on the moving and fixed surface objects
- Automatic: uses all points on the moving and fixed surface objects
- Landmark and automatic: uses landmark registration as a starting

– Unlink Design Link surface objects to allow editing parts in Simpleware

Interactive positioning:

– Position and orientation: interactively reposition the imported parts
– Zero position: automatically place imported parts within image volume
– Assembly transformation matrices automatically reported to the log

Multipart Volumetric Meshing (options available for FE and CFD meshes)

Mixed hexahedral/tetrahedral or pure tetrahedral element volume meshing

Element types: linear, straight quadratic or curved quadratic

Choice of meshing algorithms:

– FE Grid: image resolution-based mesh
– FE Free: progressively decimated (or refined) mesh from the image resolution

Advanced FE Grid options:

– Smooth or voxel cell (pure hexahedral with unsmoothed boundaries/interfaces) mesh
– Surface smoothing
– Mesh quality optimization
– Mesh adaptation
– Smooth masks against exterior

Advanced FE Free options:

– Coarseness slider to automatically adjust advanced parameters relating to mesh coarseness
– Per-part meshing settings
– Meshing mask and surface objects in the same model (without voxelization)
– Adaptive surface remeshing
– Characteristic element edge lengths (min/max)
– Surface elements constraints: surface change rate, number of elements across a layer
– Volume elements constraints: internal change rate, number of quality optimization cycles
– Other options: snap to parent surface, snap surface object nodes to boundaries, smooth masks against exterior, refine near slits and cavities

Additional mesh quality improvement – user-defined minimum acceptable element qualities. Quality metrics include:

– In-out aspect ratio
– Tetrahedron volume skew
– Tetrahedron minimum dihedral angle
– Jacobian
– Jacobian and in-out rati000009 2 0 612 2 reW* nBT/F1 9 Tf1 0 0 1 160.